# 3PHASE PHANTOM LOADING KIT

## **Technical Specification:**

Type : Continuously Variable Type

**Model No.** : SR-VPF-320/10-3P

**Input** : 415V AC <u>+</u> 10%, 50Hz, 3P 4W or 3P 3W

Capacity : 450VA in Total

**Application**: To test and calibrate 3P 4W, 3P 3W and 1P 2W Active,

Reactive, and Apparent Power Energy Meter, Voltmeter,

Ammeter, PF Meter.

Salient Feature

: 1. Variable 3P Output Voltage (0 – 320V AC, P-N).

2. Variable 3P Output Current (0 – 10.0A AC per Phase).

3. Variable Phase Angle in all 3 Phases ( 0<sup>0</sup> - 360<sup>0</sup> ).

4. Voltage Selection (110V AC / 220VAC(P-N) with Off )
5. Current Selection (1A AC /10A AC per Phase with Off )

6. Current Forward / Reverse Selection

## **Voltage Output:**

Voltage Range : 0 – 320V AC per Phase (P-N)

Range Selection : 110V / 220V / Off

110V Range : 0 - 150V AC 220V Range : 0 - 320V AC

Burden : 100VA per phase

Volt Adjustment : By a manual Variac in each phase

## **Current Output:**

Current Range : 0 – 10.0A AC per Phase

Range Selection : 1.0A / 5.0A /Off

1.0A Range : 0 - 1.5A AC 5.0A Range : 0 - 10.0A ACBurden : 50VA per phase

Amp Adjustment : By a manual Variac in each phase

#### Phase Angle:

Phase Angle

: 2 Nos. of Selector Switches is provided to change Phase Angle of 3 Phases at the same time as follows.

- 1. Coarse Selection( X,Y,Z): Using this Switch, Phase Angleranges  $X = 0^{0} 120^{0}$ ,  $Y = 121^{0} 240^{0}$ ,  $Z = 241^{0} 360^{0}$  are selectable.
- 2. **Fine Selection(A,B,C,D)**: Using this Switch, Phase Angles will be selected in 4 ranges within the range selected by **Coarse Selection** Switch. For example, if  $X = 0^{\circ} 120^{\circ}$  is selected by Coarse Selection, by **Fine Selection**  $A = 0^{\circ} 30^{\circ}$ ,  $B = 30^{\circ} 60^{\circ}$ ,  $C = 60^{\circ} 90^{\circ}$  and  $D = 90^{\circ} 120^{\circ}$  ranges will be selected.

Phase Angle will be continuously adjustable by a Manual Variac in each phase for 30° in the range selected by **Fine Selector** Switch.

# **Phase Angle Selection Table:**

| Fine                            | Α                                   | В                                   | С                                   | D                                   |
|---------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|
| Coarse                          | <b>Phase Angle</b>                  | Phase Angle                         | Phase Angle                         | Phase Angle                         |
| $X = 0^0 - 120^0$               | 0° - 30°                            | 30° - 60°                           | 60° - 90°                           | 90 <sup>0</sup> – 120 <sup>0</sup>  |
| $Y = 121^{\circ} - 240^{\circ}$ | 120 <sup>0</sup> – 150 <sup>0</sup> | 150 <sup>0</sup> – 180 <sup>0</sup> | 180 <sup>0</sup> – 210 <sup>0</sup> | 210 <sup>0</sup> – 240 <sup>0</sup> |
| $Z= 241^{\circ} - 360^{\circ}$  | 240 <sup>0</sup> – 270 <sup>0</sup> | $270^{0} - 300^{0}$                 | 300 <sup>0</sup> – 330 <sup>0</sup> | 330 <sup>0</sup> – 0 <sup>0</sup>   |

#### **Power Factor:**

Range : Measurement of Power Factor range will be -ZPF to Unity

to +ZPF

Forward / Reverse : Forward / Reverse selection Switch is provided for Output

Currents.

Protection : Glass Fuse is provided for Input Power, Voltage Outputs

and Current Outputs.

Meter : 1 No. Multi Function Meter is provided for the indications

of 3P Voltages, 3P Currents, Power Factor and Phase Angle.

Terminals : For 3P Voltage Outputs R, Y, B, N terminals are provided.

For 3P Current Outputs R1-R2, Y1-Y2, B1-B2 terminals are

provided.

Input Cable : Suitable 4 Core (2mts) input power cable of suitable size

will be provided.

Output Cable : Not in our scope of supply.

Enclosure : Two types of enclosures will be provided.

1. Table Top Model

2. Portable Type (Box Type)

Customer should mention the type while ordering.

Test Certificate : In-house Test Certificate will be provided along with Kit.

Guarantee : Guarantee Certificate for 12 Months from the date of

Supply will be provided along with Kit.

Manual : Detailed instruction manual will be supplied along with Kit.

Spares : One set of spare fuses will be supplied along with Kit.